


PORTABLE GENERATOR GÉNÉATEUR PORTATIF GENERADOR PORTÁTIL

Model may vary slightly from that shown

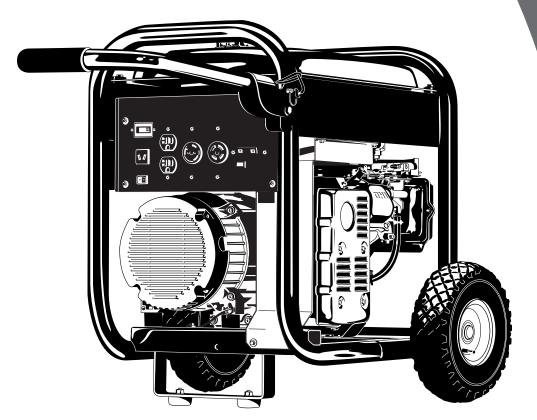

Model / Modèle / Modelo

PRO4000 01932

Illustrated Parts List

Questions? Help is just a moment away!

Call: Generator Helpline - I-800-743-4115 M-F 8-5 CT

Les Parties illustrées Enumèrent

Vous avez des questions?
Vous n'avez pas besoin d'aller loin pour trouver de l'aide!

Appelez: Ligne d'assistance de Générateur - 1-800-743-4115 M-F 8-5 CT

Las Partes ilustradas Listan


Preguntas? La ayuda es justa un momento lejos!

Llamada: Generador Helpline -I-800-743-4115 M-F 8-5 CT

BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC JEFFERSON, WISCONSIN, U.S.A.

Manual No. 195541A Revision B (07/06/2006)

EXPLODED VIEW - MAIN UNIT

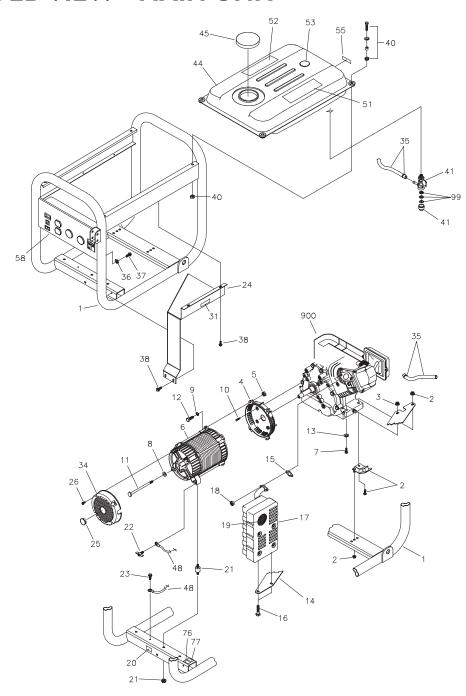


Copyright © 2006 Briggs & Stratton Power Products Group, LLC. All rights reserved. No part of this material may be reproduced or transmitted in any form by any means without the express written permission of Briggs & Stratton Power Products Group, LLC.

PARTS LIST - MAIN UNIT


ltem	Part #	Description	Item	Part #	Description
- 1	B192658GS	CRADLE	41	193272GS	VALVE, Tank
2	194150GS 67989GS	KIT, Mount, Vibration, 45° NUT, M8 Flange Serrated	44	195988GS	ASSY, Tank, Fuel (Includes Items 41, 51, 52 & 53)
4	190220GS	HOUSING, Engine Adapter	45	189135GS	CAP, Fuel, Vented
5	*	NUT, Hex M8 - 1.25		195373GS	WIRE, Ground
6	NSP	ASSY, Alternator (see page 4)		194984GS	DECAL, Danger
7	*	TPHMS, M8 - 1.25 x 25	52	94480GS	DECAL, Start Instructions
8	96796GS	WASHER, M8 Flat	53	189136GS	GAUGE, Fuel
9	*	WASHER, M8 5/16 Lock	55	197797GS	DECAL, Fuel Shutoff
10	190274DGS	SCREW, 3/8-16 x 7/8	58	195512GS	ASSY, Control Panel (see page 5)
11	53122GS	HHCS, 5/16-24 x 6-1/2	76	195459GS	DECAL, Neutral Ground
12	*	HHCS, M8 1.25 x 25	77	195940GS	DECAL, Ground French
13	*	WASHER, 5/16 Flat	99	189759GS	KIT, Fuel Repair Valve
14	193021GS	BRACKET, Muffler	900	§	ENGINE
15	710082	GASKET, Exhaust			
16	*	HHCS, M6 - 1.0 x 12	Parts	Not Illustrate	d
17	192898GS	MUFFLER		43483GS	PLUG, 250V 20A, 4 Prong
18	710090	NUT		100523GS	PLUG, 125V 30A, 3 Prong
19	83083GS	SCREEN, Spark Arrest		65787GS	CABLE, Battery Charge
20	B4986GS	DECAL, Ground		BB3061GS	OIL BOTTLE
21	194153GS	KIT, Vibration Mount		MS6669	MANUAL, Engine
22	86494GS	SCREW, Wing M6 1.0 x 16		195541GS	MANUAL, Operator's
	86292GS	SCREW, $10-16 \times 3/4$, Self Drill		199383GS	DECAL, Family CA, EVP
24	J193053GS	SHIELD, Heat		193642GS	KIT, Decals Service
25	191190GS	CAP			
	74908GS	TAPTITE, M5-0.8 x 10	Optio	onal Accessorie	
31	191436GS	DECAL, Caution Hot Muffler		100031	STABILIZER, Fuel
	195422GS	COVER, RBC, Platic with Cap	* 1		
	791745	KIT, Fuel Hose (cut to fit)		•	numbers are common fasteners and
-	*	WASHER, M6 - 1/4 Int. Shakeproof	are av	ailable at local ha	rdware stores.
37	B2153GS	SCREW, #10 Self Drilling	§ - Co	ntact engine mar	nufacturer.
38	192376GS	SCREW, 12-24 x 1/2 THD Forming		Ü	
40	19 4 212GS	KIT, Fuel Tank Hardware			

EXPLODED VIEW AND PARTS LIST - ALTERNATOR

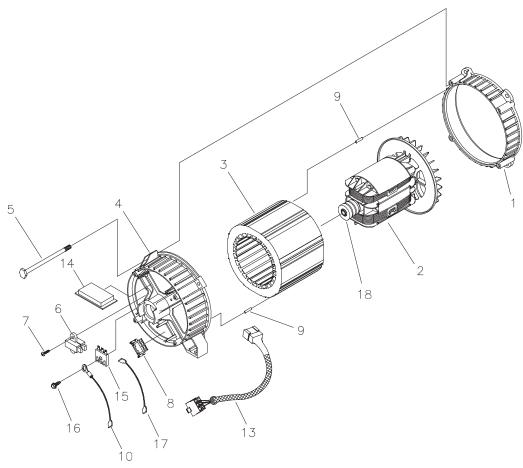

Item	Part #	Description
I	186059GS	ADAPTER, Mounting, Alternator
2	193034GS	ROTOR (Includes Item #18)
3	193035AGS	STATOR
4	186060GS	RBC, with O-Ring (p/n 189197GS)
5	86308GS	HHCS, M6 - 1.0 x 115 SEMS
6	66386GS	ASSY, Holder, Brush
7	66849GS	TAPTITE, M5 - 0.8 x 16
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll, 4mm x 10
10	193428AGS	ASSY, Wire, Ground
13	193157GS	HARNESS, Wire, Power
14	189769GS	REGULATOR
15	65795GS	RECTIFIER
16	66849AGS	TAPTITE, M5 - 0.8 x 20
17	192403XGS	WIRE, Ground
18	65791GS	BEARING

EXPLODED VIEW AND PARTS LIST - CONTROL PANEL

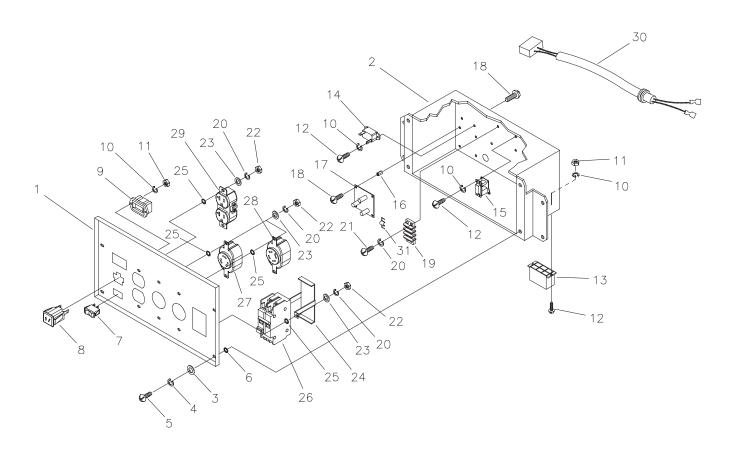


Item Part #		Description	Item Part #	Description
- 1	NSP	PANEL, Control	18 *	PHTS, #6-32 × 3/8
2	B192835GS	BOX, Control Panel	19 B5052GS	STRIP, Terminal
3	*	WASHER, Flat, #10 - M5	20 *	WASHER, Lock, M4
4	*	WASHER, Lock, M5	21 *	PPHMS, M4 - 0.7 x 16
5	*	PPHMS, M5 - 0.8 x 12	22 *	NUT, M4 - 0.7
6	*	WASHER, M6 - 1/4, Int. Shakeproof	23 *	WASHER, Flat, M4
7	82538GS	SWITCH, Rocker	24 192931GS	BRACKET, GFCI Breaker
8	90418GS	OUTLET, 12VDC, Snap	25 *	WASHER, Shakeproof, Int. #8
9	77604GS	METER, Hour	26 192828BGS	BREAKER, Circuit, GFCI, 20A
10	*	WASHER, Lock, M3	27 68868GS	OUTLET, 120V, 30A
11	*	NUT, M3 - 0.5	28 68867GS	OUTLET, 120/240V, 20A
12	*	PHMS, M3 - 0.5 x 10	29 68759GS	OUTLET, 120V, 20A, Duplex
13	22694GS	HOUSING, Receptacle	30 193036GS	HARNESS, Wire
14	87962GS	BREAKER, Circuit, 12V, 10A	31 46669GS	JUMPER, Terminal Block
15	84028GS	TRANSFORMER, Idle Cnt		-
16	64525GS	STANDOFF, Hex	* - Items without	part numbers are common fasteners and

are available at local hardware stores.

17 193362GS

PCB, Idle Control

EXPLODED VIEW AND PARTS LIST - WHEEL KIT

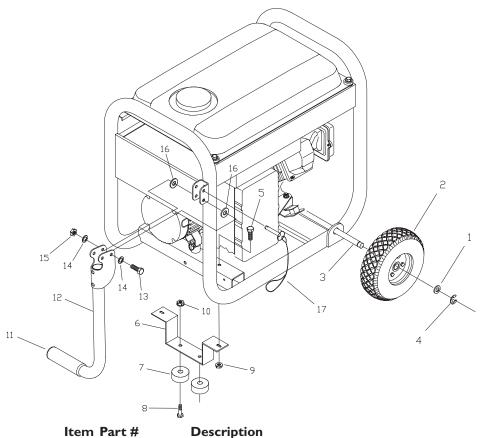

ltem	Part #	Description
- 1	*	WASHER, 5/8
2	B4966GS	WHEEL
3	191267PGS	AXLE, 5/8" x 22.20"
4	191265GS	E-RING, 5/8
5	*	HHCS, M8 1.25 x 20
6	B89595GS	BRACKET, Support
7	87841GS	VIBE MOUNT
8	*	HHCS, $1/4 - 20 \times 3/4$
9	67989GS	NUT, M8 Flange Serrated
10	194005GS	NUT, I/4 - 20 Flange Nylok
П	192477GS	GRIP
12	B193166GS	ASSY, Handle (Includes Item 11)
13	*	HHCS, M8 - 1.25 x 50
14	*	WASHER, Flat 5/16 - M8
15	*	NUT, M8 - 1.25
16	*	WASHER, $1.2 \times .346 \times .03$ Nylon
17	B4135GS	PIN, Handle Release

 $[\]mbox{\ensuremath{^{*}}}$ - Items without part numbers are common fasteners and are available at local hardware stores.